



Thank you for purchasing a ZTechnik Product. Please read these instructions carefully and thoroughly before beginning work. Dealers if installing this windshield for a customer please give them this manual. It contains information needed to properly maintain and use this product.




**Attention:**

Special notes and cautionary measures which can prevent damage to the accessory or motorcycle.



**Note:**

Tips for facilitation of operation, control and adjustment, as well as maintenance work.

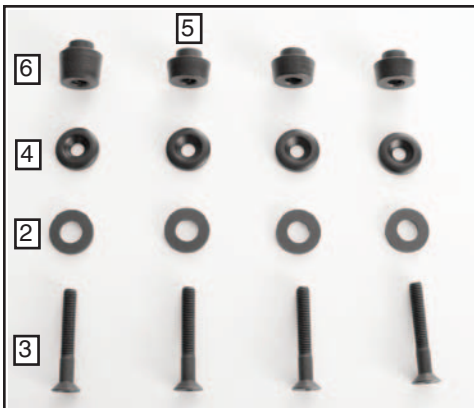

**TOOL REQUIRED:**  
3mm Hex Key

**KIT CONTAINS ONE OF THE FOLLOWING WINDSCREENS**

Item	Description	Qty.
1	Z2410, Windscreen Sport, Dark Tint	1
1	Z2411, Windscreen Touring, Light Tint	1
1	Z2412, Windscreen Tall, +3", Clear	1
1	Z2413, Windscreen, Tall, +7", Clear	1

**BAG 1001, Contained in all Kits**

2	44-447635-000, Washer with Adhesive	4
3	51-514130-000, Screw M5 x 30	4
4	34-346042-000, Cap	4
5	44-443521-000, Stand Off, Small	3
6	44-443522-000, Stand Off, Large	1

**PREPARATION**

1. Remove the stock windshield. Parts will not be reused.



Right and Left of motorcycle are determined from the rider's perspective while sitting on the motorcycle.

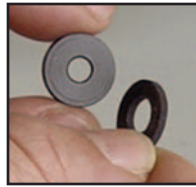
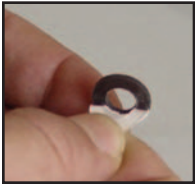


Figure 1



Figure 2

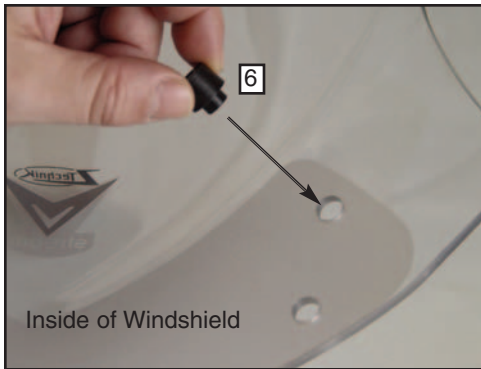


Figure 3

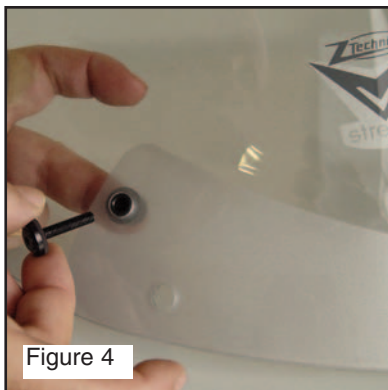


Figure 4



## INSTALLATION

1. Remove the backing paper from a Washer (2) and apply washer to the Flat Side of a Cap (4). Repeat procedure for remaining Washers. **Figure 1**

2. Insert a Screw (3) through each Cap Assembly. **Figure 2**

3. From the Inside, install the Large Standoff (6) into the **Upper Right Hole** of the Windshield. **Figure 3**

4. Install the Windshield to motorcycle using the Screw Assemblies and remaining Short Standoffs (5). **3mm Hex Key Figure 4.**

5. **Tighten Screws firmly, do not overtighten.**

## MAINTENANCE

To clean the screen, wash with a clean soft cloth, plenty of warm water and if necessary, a non-abrasive soap such as dishwashing liquid. Flannel or soft chamois make good cleaning cloths. **Paint, glue residue or grease removal:** Moisten cotton with Naphtha or Turpentine followed by a wash as above. National Cycle Shield Wash™ makes a good daily cleaner and comes with a handy travel size bottle. N1401 Shield Wash is safe for helmet visors.

Do not clean polycarbonate in hot sun or high temperatures. Do not clean the screen with glass cleaners. Do not use rain protective products on the screen. Do not allow brake fluid, alcohol, or strong solvents to contact the screen.

*VStream® windshield patent no. 7,387,328*

## ! WARNING

Fahren Sie Ihr Motorrad niemals mit losen Zubehörteilen. Überprüfen Sie die Halterungen regelmäßig auf festen Sitz.

Die heutigen Motorräder sind mit einer ausreichenden Rahmensteifigkeit gebaut, um den moderaten Belastungen standzuhalten, die durch die abnehmbare Hinzufügung eines oder mehrerer Zubehörteile auf sie ausgeübt werden. Wenn ein oder mehrere Zubehörteile die Stabilität Ihres Motorrads beeinträchtigen, entfernen Sie sofort das / die Zubehörteile (e). Nehmen Sie kein Motorrad in Betrieb, das unsichere Fahreigenschaften aufweist.

Lassen Sie das Problem von erfahrenem Servicepersonal beheben, bevor Sie mit installiertem Zubehör fahren. Bei weiteren Fragen zu Handhabungsproblemen im Zusammenhang mit einem oder mehreren Zubehörteilen wenden Sie sich bitte an Ihren Händler, Motorradhersteller oder Zubehörhersteller.

Sonnenlicht, das von der inneren Krümmung der Windschutzscheibe reflektiert wird, kann zu bestimmten Tageszeiten zu einem extremen Wärmestau auf den Instrumenten des Motorrads führen und diese möglicherweise sogar zum Schmelzen bringen. Gehen Sie beim Parken vorsichtig vor, um dies zu vermeiden. Stellen Sie Ihr Motorrad in Richtung Sonne ab oder platzieren Sie einen undurchsichtigen Gegenstand über diesem Bereich.