





<p>Attention</p>  <p>Special notes and cautionary measures which can prevent damage to the accessory or motorcycle.</p>	<p>Note:</p>  <p>Tips for facilitation of operation, control and adjustment, as well as maintenance work.</p>
---	---

Check contents of this package against parts list. Report any missing parts to your dealer or ZTechnik directly. The following information is necessary: Bag Number and Date Stamp(s) on outside of Kit or Box and Place of Purchase.

Z2353, Z2354 and Z2355 Parts List				
Index	Part Number	Description	Qty.	Notes
1		Windshield, Hardcoated Lexan® polycarbonate	1	Not Pictured
Kit-Z2355				
2	34-351064-000	Bracket, Left	1	
3	34-351065-000	Bracket, Right	1	
Bag#1211				
4	51-514212-000	Hex Screw, M6 x 12 Stainless Steel	4	
5	34-346037-000	Cap, Black	4	
6	44-447304-000	Grommet	4	
7	51-515734-000	Hex Screw M8 x 30 Stainless Steel	2	
8	51-515725-000	Hex Screw, M8 x 25 Stainless Steel	2	

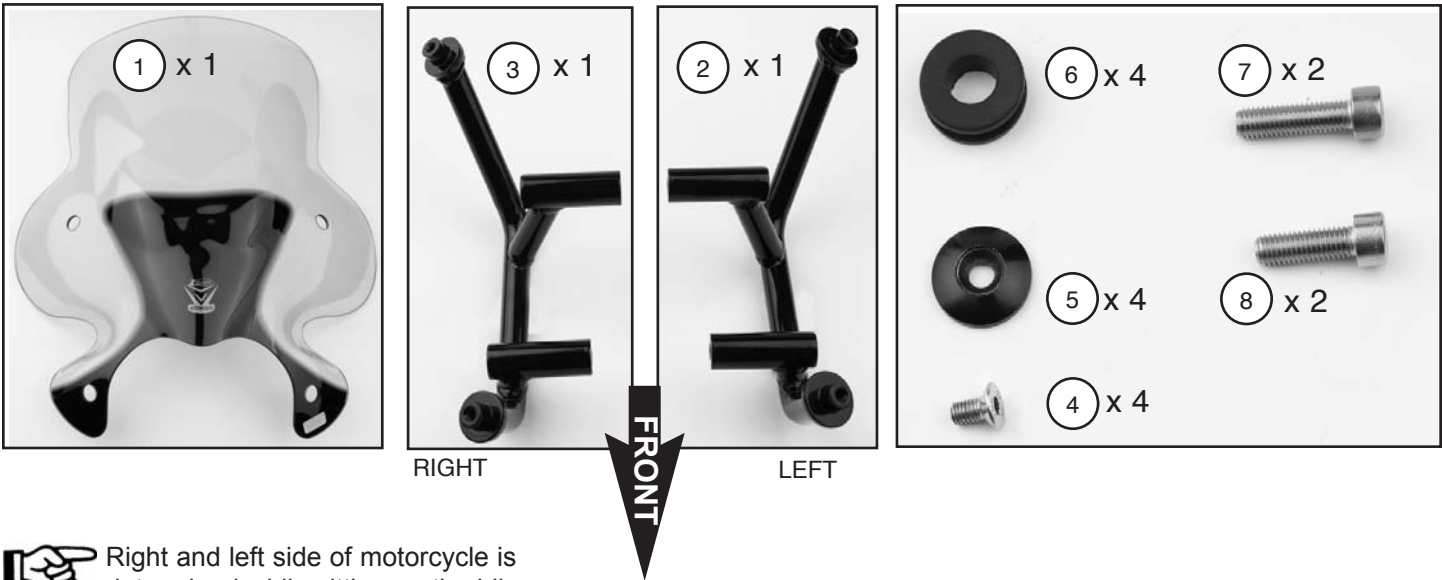

 Right and left side of motorcycle is determined while sitting on the bike.


TOOLS REQUIRED:
 Torx Wrench, T40
 Allen Wrench, 6mm and 4mm

Additional Tools for White Model
 BMW X560A.
 Torx Wrench, T25




PREPARATION

Position the motorcycle securely on its stand.
Cover the front fender while you work.

 **REFER TO PAGE 3 FOR ADDENDUM
INSTRUCTIONS FOR WHITE BMW R1200R
(BMW CODE X560A)**

INSTALLATION

Install Brackets

 Install brackets to motorcycle one side at a time!
Following this instruction will assure you do not disturb headlight position!

Install Left Bracket

1. On the left side of the motorcycle, remove the upper and lower screws from the turn signal bracket. OEM screws will not be re-used. **(T40 Torx Wrench) Figure 1**

2. Use a M8 x 30 Screw (7) from Bag#1211 to install the Bracket (2) at the Upper hole of the turn signal bracket. **(6mm Hex Key Wrench) Figure 2**

3. Use a M8 x 25 Screw (8) to mount the bracket (2) to the turn signal bracket at the lower hole. **(6mm Hex Key Wrench) Figure 2**

Install Right Bracket

4. Repeat steps 1-3 on right side of motorcycle.

5. Tighten all fasteners securely. **(6mm Hex Key)**

Install Windshield

6. Insert grommets (6) into windshield. **Figure 3**

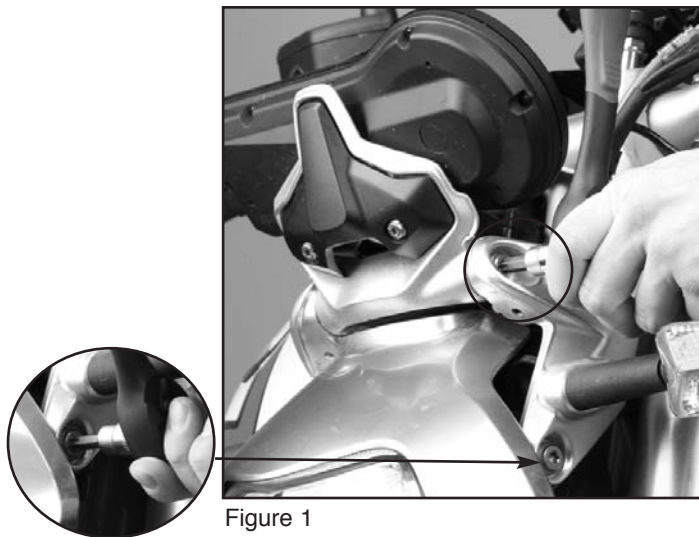


Figure 1



Figure 2

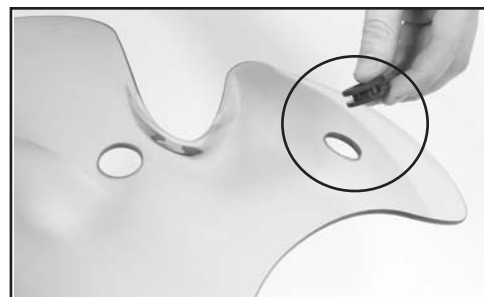


Figure 3

Install Windshield

7. Flex shield, to align holes with the mount points.

Figure 4

8. Secure Windshield to Brackets at the 4 hole locations with a cap (5) and a M6 Screw (4). **(4mm Hex Key)**

Figure 5

9. Tighten securely. **(4mm Hex Key)**



Figure 4

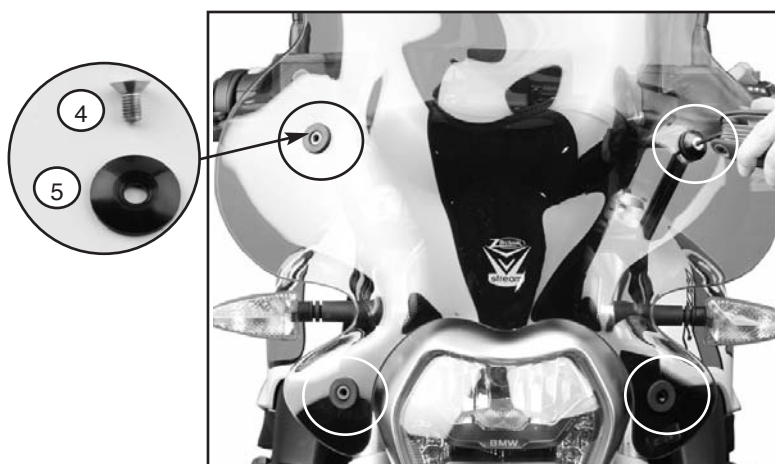


Figure 5

ADDENDUM INSTRUCTIONS FOR WHITE BMW R1200R (BMW CODE X560A)



Figure A

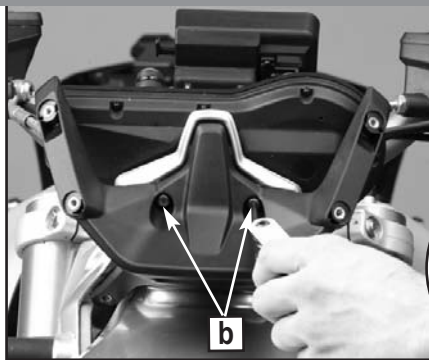


Figure B

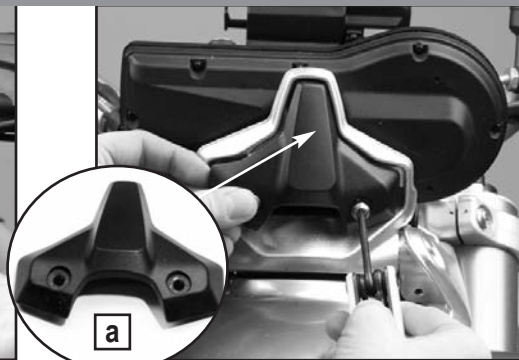


Figure C

If your R1200R is white (BMW code X560A), it should have the BMW sport screen. **Figure A**

Removal of this part is necessary to install the VStream Windshield. **(T25 Torx) Figure A and B**

You may optionally purchase BMW Part number 46 63 8 534 288 (a) to cover the back of the instrument panel. This can be attached by re-using the center screws (b) that were attaching the sport screen bracket. **(T25 Torx) Figure B and C**

ZTechnik PO Box Maywood, IL 60153-0158 USA

708-343-0400 / Fax: 708-343-0625 / www.ZTechnik.com / e mail: info@ZTechnik.com

MAINTENANCE

To clean the screen, wash with a clean soft cloth, plenty of warm water and if necessary, a non-abrasive soap such as dishwashing liquid. Flannel or soft chamois make good cleaning cloths. **Paint, glue residue or grease removal:** Moisten cotton with Naphtha or Turpentine followed by a wash as above. National Cycle Shield Wash™ makes a good daily cleaner and comes with a handy travel size bottle. N1401 Shield Wash is safe for helmet visors.

Do not clean polycarbonate in hot sun or high temperatures. Do not clean the screen with glass cleaners. Do not use rain protective products on the screen other than National Cycle brand Rain Zip®, Part No. N1410-01. Do not allow brake fluid, alcohol, or strong solvents to contact the screen.



⚠ WARNING

Fahren Sie Ihr Motorrad niemals mit losen Zubehörteilen. Überprüfen Sie die Halterungen regelmäßig auf festen Sitz.

Die heutigen Motorräder sind mit einer ausreichenden Rahmensteifigkeit gebaut, um den moderaten Belastungen standzuhalten, die durch die absehbare Hinzufügung eines oder mehrerer Zubehörteile auf sie ausgeübt werden. Wenn ein oder mehrere Zubehörteile die Stabilität Ihres Motorrads beeinträchtigen, entfernen Sie sofort das / die Zubehörteil (e). Nehmen Sie kein Motorrad in Betrieb, das unsichere Fahreigenschaften aufweist.

Lassen Sie das Problem von erfahrenem Servicepersonal beheben, bevor Sie mit installiertem Zubehör fahren. Bei weiteren Fragen zu Handhabungsproblemen im Zusammenhang mit einem oder mehreren Zubehörteilen wenden Sie sich bitte an Ihren Händler, Motorradhersteller oder Zubehörhersteller.

Sonnenlicht, das von der inneren Krümmung der Windschutzscheibe reflektiert wird, kann zu bestimmten Tageszeiten zu einem extremen Wärmestau auf den Instrumenten des Motorrads führen und diese möglicherweise sogar zum Schmelzen bringen. Gehen Sie beim Parken vorsichtig vor, um dies zu vermeiden. Stellen Sie Ihr Motorrad in Richtung Sonne ab oder platzieren Sie einen undurchsichtigen Gegenstand über diesem Bereich.